

Alarms	Analog Parameters
Data Connection Lost	Battery Voltage
Generator Running	Engine Hours
Generator Excessive Running ¹	
Fail to Exercise ¹	
Battery Voltage High ²	
Battery Voltage Low ²	
Common Alarm ³	
Common Warning ³	
Common Shutdown ³	
Not in Auto ³	
Controls	
Control Relay Output 1: Remote Start/Stop (if wired & activated by customer)	

All Alarms & Analog Parameters noted above are only available if so configured at Generator and ATS control panel.

It is recommended that a technician with communications experience be utilized to install and calibrate any optional OMN accessories.

¹Generator Excessive Running and Fail to Exercise are available when configured through OmniView™. It is suggested to do this at time of monitoring setup.

²Battery Voltage High & Low Alarms based upon Battery Voltage Threshold settings set up in OmniView™.

³Noted Alarms require programming the EMCP3.1 at the front panel. The above Caterpillar Alarms are the standard Alarms selected by OMNIMETRIX. Please note that other Alarms can be configured in the EMCP3.1 panel. See Caterpillar EMCP3.1 Control Panel instructions for further information.