

Alarms	Analog Parameters
Wireless Link Disconnected	Battery Voltage
Generator Running	Engine Hours
Generator Excessive Running ¹	Coolant Temp
Fail to Exercise ¹	Oil Pressure
Battery Voltage High ²	Fuel Level ³
Battery Voltage Low ²	RPM
Manual Run Off	Generator Frequency
Common Fault	Percent of Rated kW
Common Shutdown	Generator Phase A Voltage
Not In Auto	Generator Phase B Voltage
Oil Pressure Low	Generator Phase C Voltage
Coolant Temp High	Generator Avg. Voltage
	Generator Phase A Current
	Generator Phase B Current
	Generator Phase C Current
	Generator Avg. Current
	Monitor Supply Voltage
Controls	
Remote Start/Stop (if activated by customer)	

All Alarms & Analog Parameters noted above are only available if so configured at Generator and ATS control panel.

It is recommended that a technician with communications experience be utilized to install and calibrate any optional OMN accessories.

¹ Generator Excessive Running, Fail to Exercise, and Engine Hours are available when configured through OmniView. It is suggested to do this at time of monitoring setup.

² Battery Voltage High & Low Alarms based upon Battery Voltage Threshold settings set up in OmniView.

³ Fuel Level available with additional accessories.