

Alarms	Analog Parameters
Data Connection Lost	Battery Voltage
Generator Running ⁵	Engine Hours ¹
Generator Excessive Running ¹	
Fail to Exercise ¹	
Battery Voltage High ²	
Battery Voltage Low ²	
Common Alarm ³	
Not In Auto ⁴	
Coolant Temp Low Warning ⁴	
Coolant Temp High Warning ⁴	
Oil Pressure Low Warning ⁴	
EPS Supplying Load ⁴	
Controls	
Control Relay Output 1: Remote Start/Stop (if wired & activated by customer)	

All Alarms & Analog Parameters noted above are only available if so configured at Generator and ATS control panel.

It is recommended that a technician with communications experience be utilized to install and calibrate any optional OMN accessories.

¹ Generator Excessive Running, Fail to Exercise, and Engine Hours are available when configured through OmniView™. It is suggested to do this at time of monitoring setup.

² Battery Voltage High & Low Alarms based upon Battery Voltage Threshold settings set up in OmniView™.

³ One programmable alarm comes standard on the DEC3000. This alarm is programmable and other options are available. Please note that to utilize & program this programmable Alarm, Customer must have Kohler SiteTech software at time of install. Refer to Kohler DEC3000 O&M for additional options.

⁴ Alarms require optional Kohler Two Input/Five Output Module Kit to be provided, wired, & programmed by Customer. The Alarms noted above are recommended Alarms. These Alarms are programmable and other options are available. Please note that to utilize & program the Kohler Two Input/Five Output Alarm Kit, Customer must have Kohler SiteTech software at time of install. Refer to Kohler DEC3000 O&M for additional options.

⁵ Generator Running Alarm requires optional Kohler Run Relay Kit to be provided, wired, & programmed by Customer. Please note that to utilize & program the Kohler Running Alarm Kit, Customer must have Kohler SiteTech software at time of install. Refer to Kohler DEC3000 O&M for additional options.