

1. Unpack the monitor, antenna and the data/power cable. The 25 pin connector plugs onto the front of the OmniMetrix® monitor. This cable includes wires to power the monitor as well as wires for alarm inputs, relay outputs and analog inputs. Take a moment to inspect all components to verify there is no shipping damage.
2. Place the antenna vertically on the roof of the generator and route the antenna cable into the area of the generator control. The antenna used for transmitting must be installed to provide a separation distance of at least 20 cm from all persons and must not transmit simultaneously with any other antenna transmitters. BE SURE to provide a drip loop lower than the monitor to keep water from running down the antenna cable into the monitor connection.
3. Attach the monitor via its magnetic feet, on top of the engine controller or other appropriate location. Horizontal surfaces are best, but the unit may be mounted vertically or even upside down if necessary. *Note: If mounted vertically, install the monitor with the cables down to prevent water from entering the enclosure.*
4. Route the data/power cable into the generator control enclosure.
5. Instructions for wiring the monitor can be found in the table below.
6. Attach the antenna cable to the front of the monitor, and tighten thumb tight.
7. Turn on the monitor and confirm that the LEDs light up and blink. If not, check for power on the terminal strip. If, after 5 minutes, the only LED lit is the Power LED, check the antenna mount and cable connection.
8. Allow 15 minutes for the monitor to log into the network and then call OmniMetrix at 770-209-0012 to confirm installation. Access to machine data is through the OmniView® web interface at www.omnimetrix.net. Contact OmniMetrix for login instructions and web training.



Data/Power Cable



Deep Sea 5110 Controller

Deep Sea 5110 Wiring Table			
OMN WIRE	Function	DSE5110 Connection	DSE5110 Configuration*
Red	Battery +	A-2	--
Black	Battery -	A-1	--
Orange	Generator Running	A-6	26 -> Output 1 = 5-Engine Running
Blue	Common Alarm	A-7	27 -> Output 2 = 17-Common Alarm
Pink	In Auto	A-8	28 -> Output 3 = 7-System in Auto
White/Yellow	Remote Start	B-10	33 -> Input 1 = Remote Start, Close to Activate
White/Brown	Remote Start Common	A-1	--

*The configuration information is found on pages 26-30 of the DSE5110 Operating Manual, Issue 3.3 Part #057-009 5110.

If you have any questions, please call OmniMetrix Tech Support at 770-209-0012 or email at techsupport@omnimetrix.net.