


1. Unpack the monitor, antenna and the data/power cable. The 25-pin connector plugs onto the front of the OmniMetrix® monitor. This cable includes wires to power the monitor as well as wires for alarm inputs, relay outputs and analog inputs. Take a moment to inspect all components to verify there is no shipping damage.
2. Place the antenna vertically on the roof of the generator and route the antenna cable into the area of the generator control. The antenna used for transmitting must be installed to provide a separation distance of at least 20 cm from all persons and must not transmit simultaneously with any other antenna transmitters. BE SURE to provide a drip loop lower than the monitor to keep water from running down the antenna cable into the monitor connection.
3. Attach the monitor, via its magnetic feet, on top of the engine controller or other appropriate location. Horizontal surfaces are best, but the unit may be mounted vertically or even upside down if necessary. *Note: If mounted vertically, install the monitor with the cables down to prevent water from entering the enclosure.*
4. Route the data/power cable into the generator control enclosure.
5. To utilize the Modbus capabilities of the controller connect the OMN white (Data+) wire to connector position TB2-3 and green (Data-) wire to connector TB2-4 as shown in the photo. Connect the red wire to TB2-2 (Battery B+) and the black wire to TB2-1 (Battery B-) ground.
6. Attach the antenna cable to the front of the monitor and tighten thumb tight.
7. With InPower software, set up the controller communications port for 9600 baud, 8 data bits, 1 stop bit, no parity. Once the communications port has been configured, turn off the controller and power it back up so the controller can read the new settings.
8. Turn on the monitor and confirm that the LEDs light up and blink. If not, check for power on the terminal strip. If, after 5 minutes, the only LED lit is the Power LED, check the antenna mount and cable connection.
9. Allow 15 minutes for the monitor to log into the network and then call OmniMetrix at 770-209-0012 to confirm installation. Access to machine data is through the OmniView® web interface at [www.omnimetrix.net](http://www.omnimetrix.net). Contact OmniMetrix for login instructions and web training.



Data/Power Cable



PCC 1301 Control

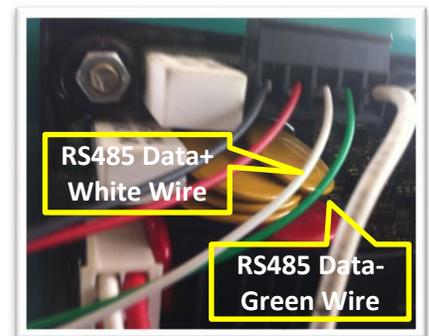

Wire terminations on TB2

Cummins PCC1301 Wiring Table		
OMN WIRE	Function	Termination
Red	Power In (9-30 Vdc)	TB2-2
Black	Ground	TB2-1
White	RS485 Data+	TB2-3
Green	RS485 Data-	TB2-4

**If you have any questions, please call OmniMetrix Tech Support at 770-209-0012 or email at [techsupport@omnimetrix.net](mailto:techsupport@omnimetrix.net).**