


- Unpack the monitor, antenna and the data/power cable. The DB9 pin connector plugs onto the front of the OmniMetrix[®] monitor. This cable includes wires to power the monitor as well as wires for alarm inputs, relay outputs and analog inputs. Take a moment to inspect all components to verify there is no shipping damage.
- 2. Place the antenna vertically on the roof of the generator and route the antenna cable into the area of the generator control. The antenna used for transmitting must be installed to provide a separation distance of at least 20 cm from all persons and must not transmit simultaneously with any other antenna transmitters. BE SURE to provide a drip loop lower than the monitor to keep water from running down the antenna cable into the monitor connection.
- 3. Attach the monitor via its magnetic feet, on top of the engine controller or other appropriate location. Horizontal surfaces are best, but the unit may be mounted vertically or even upside down if necessary. *Note: If mounted vertically, install the monitor with the cables down to prevent water from entering the enclosure.*
- 4. Route the power pigtail with the red and black wires through the cable entry on the back of the generator control by raising the cable entry gate and sliding the cable through. Be sure to retighten the gate screws.
- Locate the terminal strip inside the generator control enclosure. Connect the RED wire to Genset Battery B+ and the BLACK wire to Genset Battery B- (GND).
- 6. Attach the antenna cable to the front of the monitor, and tighten thumb tight.
- 7. Plug the data cable end labeled 'OmniMetrix End' into the DB9 connector on the front of the monitor and tighten screws.
- 8. Plug the data cable end labeled 'Generac End' into the H100 Data Connector and tighten screws.
- 9. Turn on the monitor and confirm that the LEDs light up and blink. If not, check for power on the terminal strip. If, after 5 minutes, the only LED lit is the Power LED, check the antenna mount and cable connection.
- Allow 15 minutes for the monitor to log into the network and then call OmniMetrix at 770-209-0012 to confirm installation. Access to machine data is through the OmniView[®] web interface at <u>www.omnimetrix.net</u>. Contact OmniMetrix for login instructions and web training.




Data/Power Cable



Olympian H100 Controller

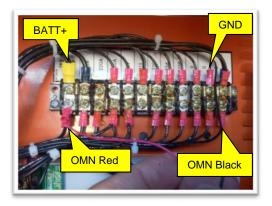

Power Cable Connections

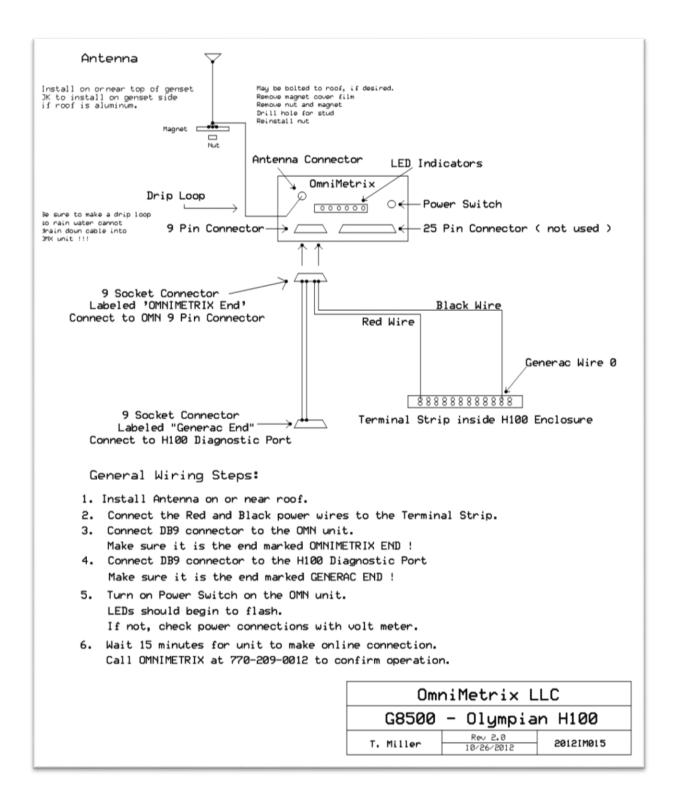

If you have any questions, please call OmniMetrix Tech Support at 770-209-0012 or email at techsupport@omnimetrix.net.

